

# Baby Delight® Snuggle Nest HD Tablet & WiFi Video Monitor

Please read the following instructions and warnings carefully.  
Keep this instruction manual for future reference.

 
 
Tools required (for wall mounting Camera only): Screwdriver and Drill (not included)

**For technical support see back page.**

Adult use only.



**WARNING:** Adult assembly required. Keep small parts away from children when assembling.

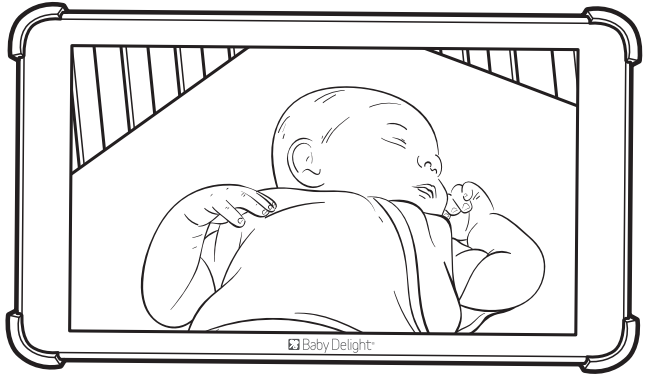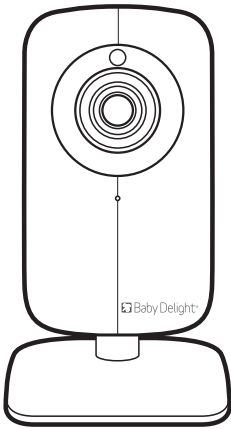

## INSTRUCTION MANUAL

### Warnings & Guidelines:



**WARNING:** STRANGULATION HAZARD - Keep cord out of baby's reach. NEVER place camera or cords within 3 feet of the crib. Use enclosed Security Clips to help secure cord away from baby's reach. Never use extension cords with AC Adapters. Only use the AC Adapters provided. Do not remove this tag.

## Warnings & Guidelines • Continued

# WARNING:

 
THIS PRODUCT CANNOT REPLACE RESPONSIBLE ADULT SUPERVISION.

- **STRANGULATION HAZARD** - Keep cord out of baby's reach.  
NEVER place camera or cords within 3 feet of the crib. Use enclosed Security Clips to help secure cord away from baby's reach. Never use extension cords with AC adapters. Only use the AC adapters provided.
- When an AC adapter is plugged into an electrical outlet, do not touch the exposed end.
- Test monitor before first use, periodically, and when changing location of the Camera.
- Do not use monitor near water (such as bathtub, sink, etc.).
- Keep monitor away from heat sources (such as stoves, radiators, etc.).
- Make sure there is proper ventilation around all monitor components. Do not place on sofas, cushions, beds, etc. which may block ventilation.
- This product is not a toy. Do not allow children to play with it.
- This product contains small parts. Adult assembly required. Exercise care when unpacking and assembling the product.


## All Components

- 1 Camera, 1 Monitor
- 2 AC Adapters
- 6 Cable Clips
- 2 Anchors & Wall Mount Screws


Camera

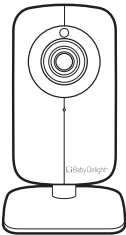


Tablet Monitor

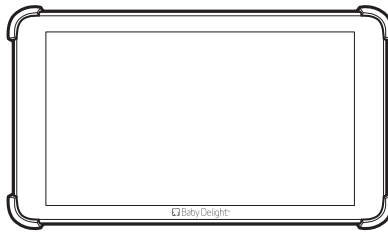 

Hardware

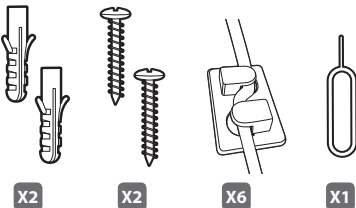 

AC Adapters

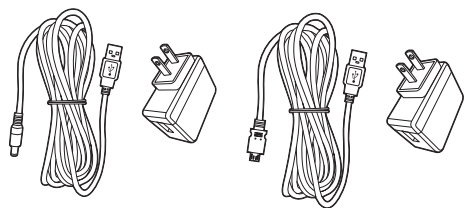 


## Features • Camera

Microphone

Lens

Volume Button

 
Power Button

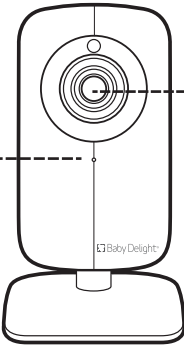

Headphone

Rear Facing  
Camera

 
Micro USB Slot

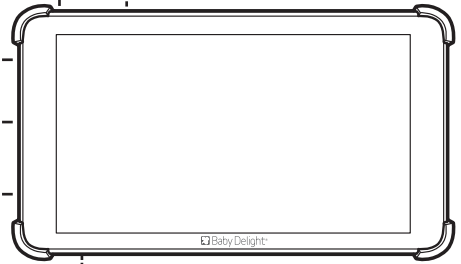

Micro SD Slot

Speaker

 Power

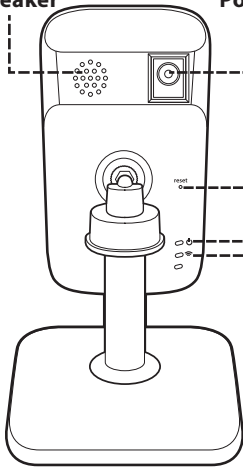


Reset Button

Power LED  
WiFi LED

Pull Out Stand

 
Camera

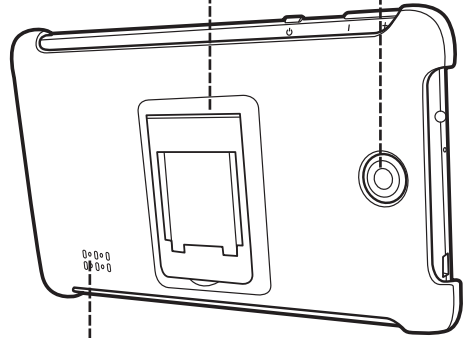


Speaker

## Product Setup

 
- 1 Charge tablet for 4-5 hours by plugging Tablet Adapter into micro USB slot on side of Tablet.

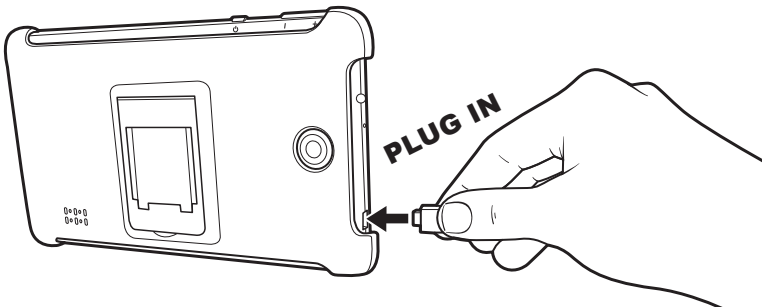

 
**2** Hold power button on top left of Tablet to turn ON.

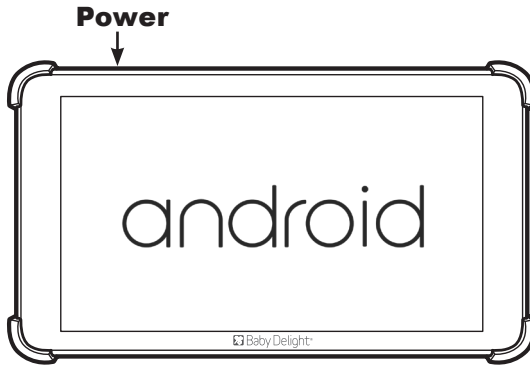

 **3** Press the Baby Delight App on the Tablet.

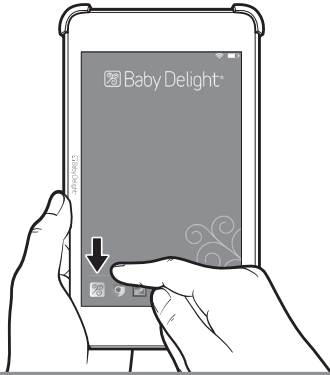


 **4** Follow the on screen instructions within the App.

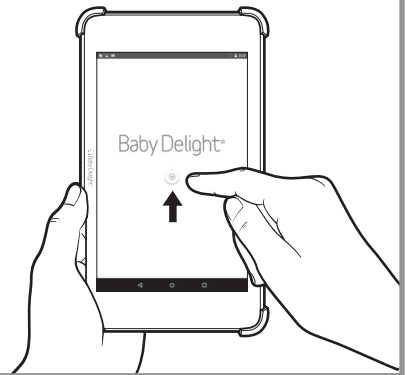

## Camera Placement • On Flat Surface

 **1**

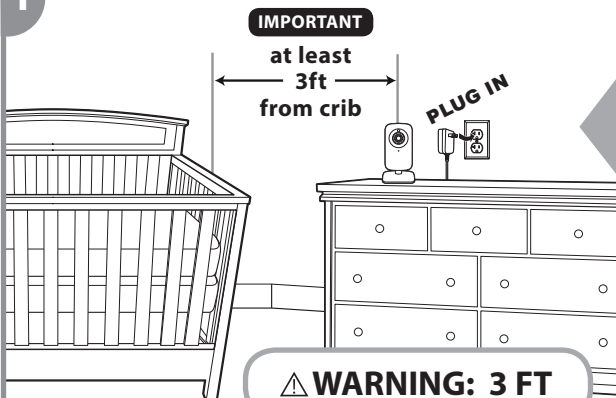

Determine a location for the Camera that will provide the best view of your baby in the crib. Place the Camera on a flat surface, such as a dresser, bureau or shelf. NEVER place Camera or cords within **3 feet** of the crib.



# WARNING:



 
**STRANGULATION HAZARD** - Children have **STRANGLED** in cords. Keep this cord out of reach of children (more than 3 feet (0.9 m) away from the crib). Never use extension cords with AC adapters. Only use the AC adapters provided. Do not remove this tag.

Never place Camera cords within 3 feet of the crib.  
Place Camera in a location that has a strong WiFi signal strength.


---

## Camera Placement • If Wall Mounting


---

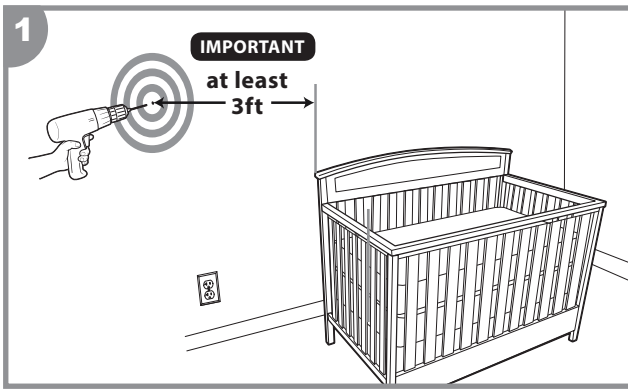

 
Determine a location for the Camera that will provide the best view of your baby in the crib. NEVER place Camera or cords within **3 feet** of the crib.

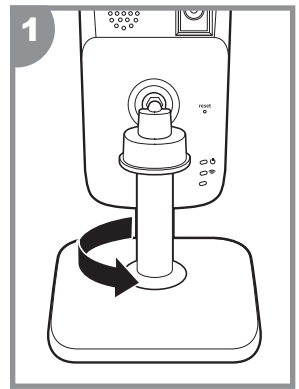

 
Hold Camera base and turn the post counter clockwise to free the plate.

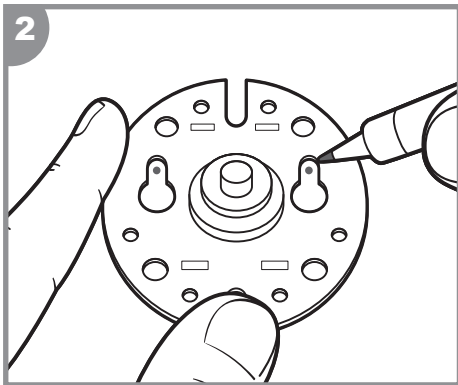

 
Place the round plate on wall and mark the hole centers.

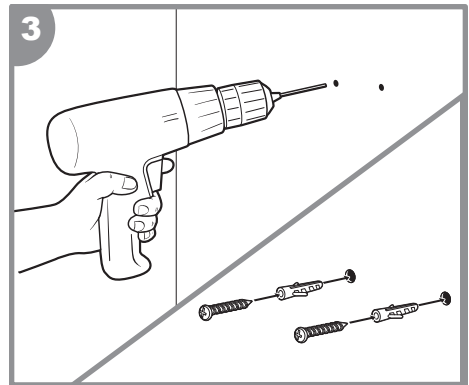

 
Drill the holes with a 1/4" drill bit and insert the wall anchors.

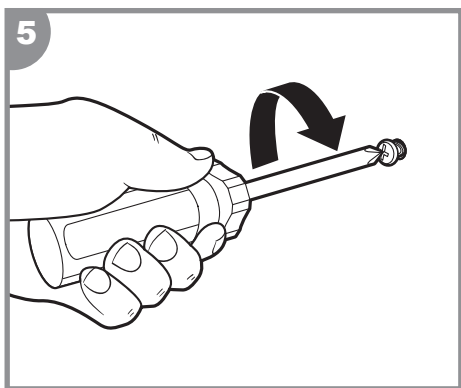

 
Insert the screws in the wall anchors, leave a gap of about 1/8 of an inch.

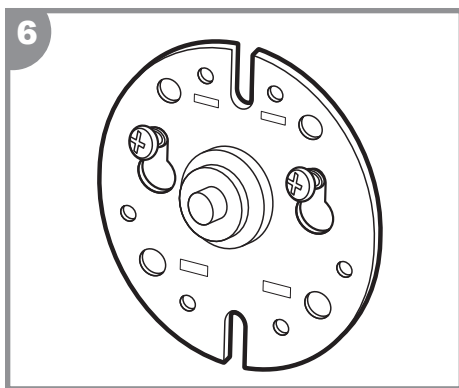


Place the round plate over screws.

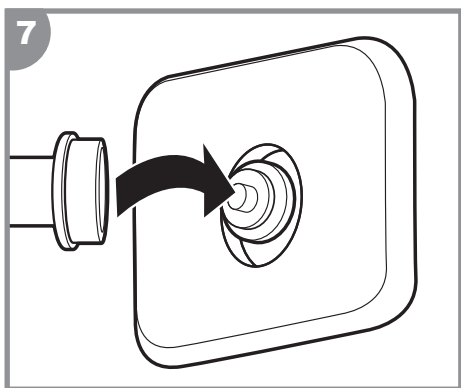 

 Place square plate on top of round plate and insert Camera base post and turn it clockwise until it is tight.

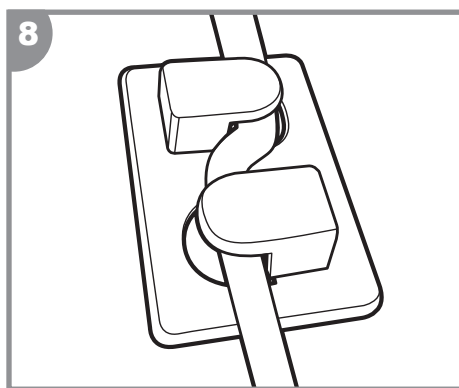

 Use the included 6 wire clips to securely keep the Camera Adapter wire out of the baby's reach.

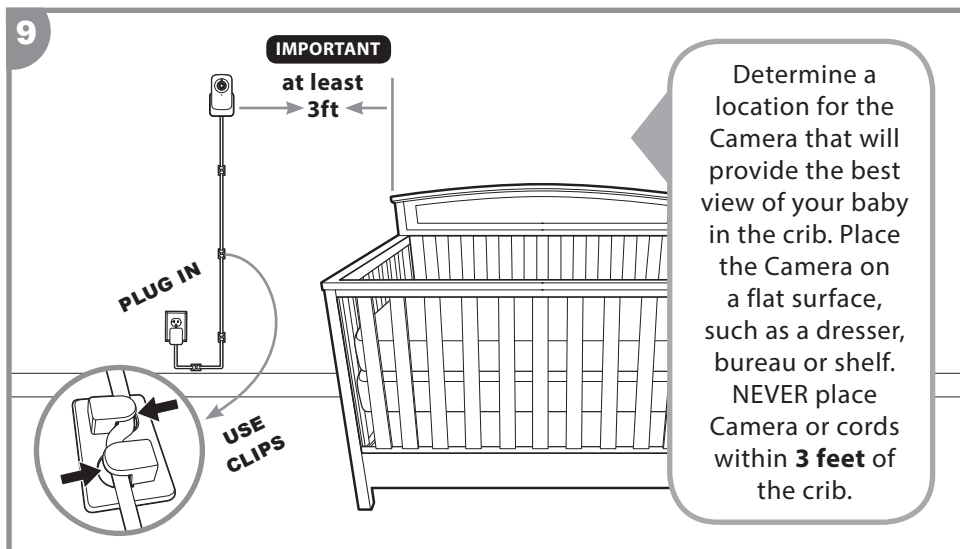

---

## Camera LEDs

---



----- Power LED

### Power LED:

Turns ON when Camera is plugged to power.



----- WiFi LED

### WiFi LED:

Flashing green when Camera is not connected to WiFi.

Solid green when camera is connected to a WiFi.

Turns off when Camera night vision is ON.

 
---

## Reset Button

---

**Press the reset button for 10 seconds in these cases:**

- When required in the app

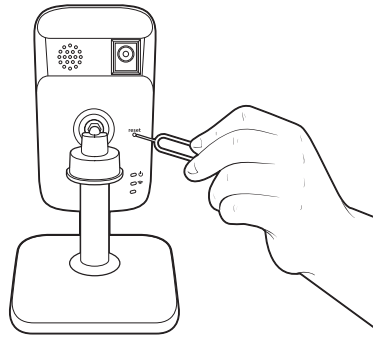

---

## Android Home Screen Control Icons

---



- Volume Control



- Show List of Apps Open (Swipe Right to Close App)



- Back to Android Home Screen



- Back One Screen

---

## Viewing on Your iOS or Android Device

---

To view on your iOS (9.0 or above) or Android device (5.0 or above), download the Baby Delight® App on App Store or Google Play and follow the on-screen instructions.

---

## Limited Warranty

---



At Baby Delight, Inc., we make innovative and high quality products for babies, children and their parents. We warrant this product to be free from defects in material and workmanship at the time of manufacture for a period of 90-days from the date of initial purchase (sales receipt is required for proof of purchase). If such a defect is discovered during the limited warranty period, we will, at our sole option, repair or replace your product at no cost to you.

This limited warranty does not cover claims resulting from misuse, failure to follow the instructions on installation, maintenance and use, abuse, alteration, involvement in an accident, and normal wear and tear.

For warranty service or replacement part information:

USA: Please call 1-401-333-6800, or write to Consumer Services, 30 Martin St. Cumberland, RI 02864

Some replacement parts may be available for purchase after this limited warranty expires. Please visit us at [www.babydelight.com](http://www.babydelight.com) or call us at 1-401-333-6800 for details.

**WARNING:**  
**STRANGULATION HAZARD** - Children have **STRANGLED** in cords. Keep this cord out of reach of children (more than 3 feet (0.9 m) away from the crib). Never use extension cords with AC adapters. Only use the AC adapters provided. Do not remove this tag.  




[www.babydelight.com](http://www.babydelight.com)  
[info@babydelight.com](mailto:info@babydelight.com)

Macari Baby, Inc. 401-333-6800  
30 Martin Street, Cumberland, RI 02864

MADE IN CHINA  
BD04060