


Read all instructions BEFORE assembly and USE of product.
KEEP INSTRUCTIONS FOR FUTURE USE. Prior to using the product, check that the product and all parts were not damaged during delivery.

BABY  DELIGHT®

Stay With Me™ Levo

Deluxe High Chair

 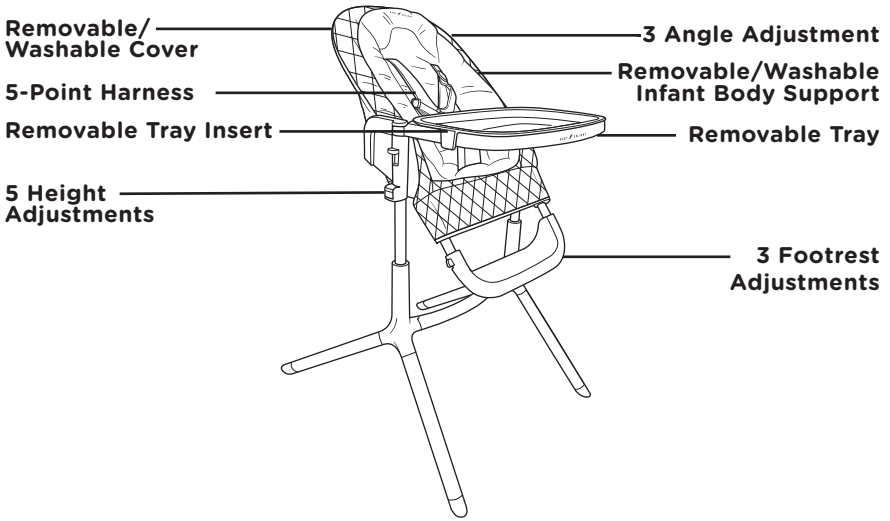


Care & Instructions

Contents




Seat Frame Assembly



Leg Frame



 
Seat Insert




Tray Insert



 Tray



Front legs (short)

 

Back legs (with wheels)

⚠ WARNING: IMPORTANT! KEEP FOR FUTURE REFERENCE!


READ AND FOLLOW ALL WARNINGS AND INSTRUCTIONS. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY OR DEATH.

FALL HAZARD: Children have suffered **severe** head injuries including skull fractures when falling from high chairs. Falls can happen suddenly if child is not restrained properly.


- Always use restraints, and adjust to fit snugly.
- Tray is not designed to hold child in chair.
- Stay near and watch your child during use.
- The child should be secured in the high chair at all times by the restraining system, either in the reclining or upright positions.
- This high chair shall be used in the upright position only by children capable of sitting upright unassisted (approximately 6 months of age).
- Stop using product when child reaches 3 years of age or 40 lbs (18 Kg) whichever comes first.
- Check front and rear latches to assure that they are locked before each use.
- Keep children's fingers away from hinges when opening and closing the high chair.
- **NEVER** place high chair near space heaters or other heat sources.
- **NEVER** lift and/or carry high chair with child in it.
- **ALWAYS** use on a flat, level surface.

Assembly/Operating

Assembling the High Chair:

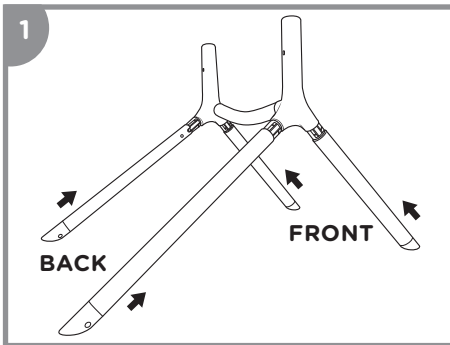


Insert FRONT and BACK LEGS into LEG FRAME matching the A,B,C,D stickers until LEGS are snapped in.

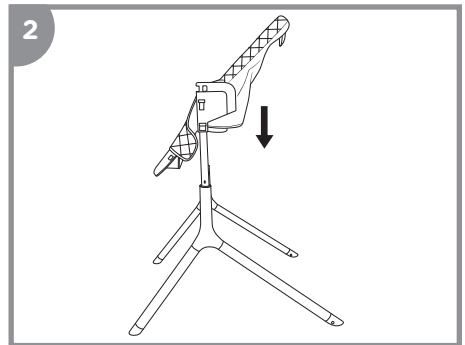

Insert SEAT FRAME ASSEMBLY into LEG FRAME ASSEMBLY making sure the seat is facing the same direction as the short FRONT LEGS until SEAT FRAME ASSEMBLY is snapped in.


Assembly/Operating - Continued

Attaching the Tray:

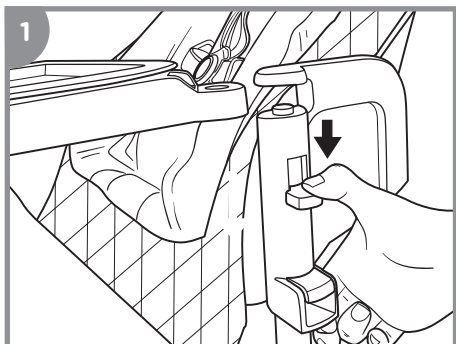


Insert the TRAY into the SEAT FRAME by pressing TRAY LOCKS down and inserting TRAY on both sides and then releasing to lock on both sides until secure. The removable TRAY INSERT snaps into the TRAY.

Height Adjustment:

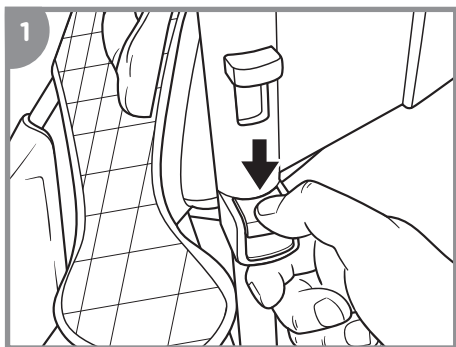


There are five adjustments to the SEAT height. Press both SEAT HEIGHT BUTTONS on each side of the FRAME to move up or down.

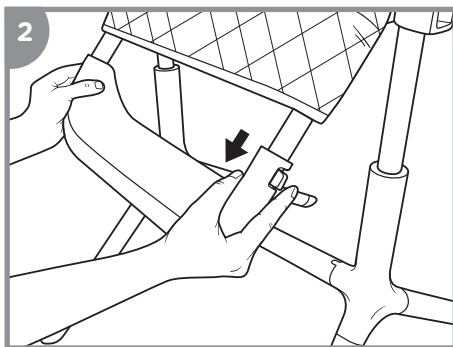


There are three adjustments to the FOOTREST height. Press both FOOTREST HEIGHT BUTTONS of each side of the FOOTREST to move up or down.

Seat Angle Adjustment:

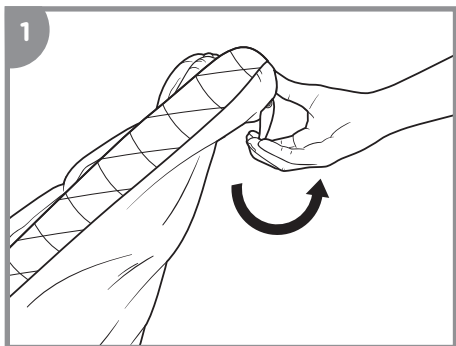

There are three adjustments to the angle of the SEAT. Rotate SEAT LATCH on the back of the SEAT outward to adjust angle up or down.


Seat Insert:

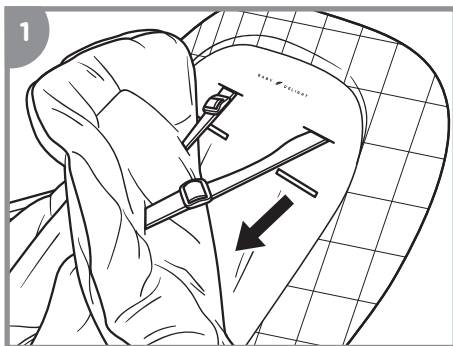


To attach the SEAT INSERT, simply unclick safety straps from 5 POINT HARNESS and feed them through the FABRIC SLOTS in the SEAT INSERT and re-click 5 POINT HARNESS.

Assembly/Operating - Continued

Using the 5-point harness:

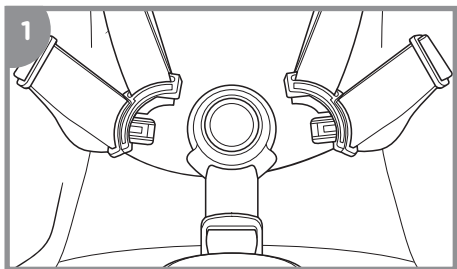

Unbuckle child RESTRAINT STRAPS and place child in SEAT.

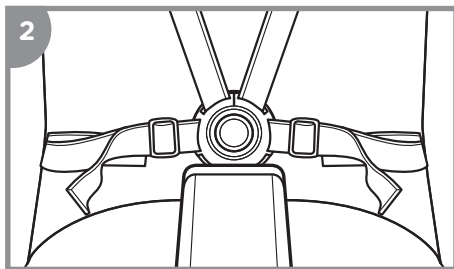

Buckle child into child RESTRAINT and tighten STRAPS for a snug and secure fit.

Care & Cleaning

Simply use a mild soap and damp cloth to wipe down the FRAME, SEAT INSERT, and SEAT COVER.

1. To machine wash the SEAT INSERT and FABRIC COVER, unclip the 5 POINT HARNESS. Remove the SEAT INSERT.
2. To remove the SEAT COVER, unfasten the hook and loop material near the FOOTREST and lift the SEAT COVER up from the bottom and unsnap the SEAT COVER on each side of the armrest area. Unfasten the hook and loop material under the SEAT and slide SEAT COVER off lifting SEAT LATCH upward.
3. To put the SEAT COVER back on, reverse steps in 1 and 2 making sure to resnap SEAT COVER on the armrest area and re-fasten hook and loop material under the SEAT area and FOOTREST.

Limited Warranty

At Baby Delight, Inc. we make innovative and high quality products for babies, children and their parents. We warrant this product to be free from defects in material and workmanship existing at the time of manufacture for a period of 90-days from the date of initial purchase (sales receipt is required for proof of purchase). If such a defect is discovered during the limited warranty period, we will, at our sole option, repair or replace your product at no cost to you. This limited warranty does not cover claims resulting from misuse, failure to follow the instructions on installation, maintenance and use, abuse, alteration, involvement in an accident, and normal wear and tear. For warranty service or replacement part information: Please call 1-401-333-6800, email info@babydelight.com, or write to Consumer Services: 30 Martin Street, Cumberland, RI 02864. Some replacement parts may be available for purchase after this limited warranty expires. Please visit us at www.babydelight.com or call us at 1-401-333-6800 for details.

BABY  DELIGHT

www.babydelight.com ©2020 Baby Delight, Inc. 1-401-333-6800 info@babydelight.com

BD05500